



 
FiberNet



**POWERDVR & HD RECEIVER
QUICK START GUIDE**

PROGRAM GUIDE

The Guide is the best way to scan what programs are available on each channel at a given time. Press **GUIDE** on your remote control to access.

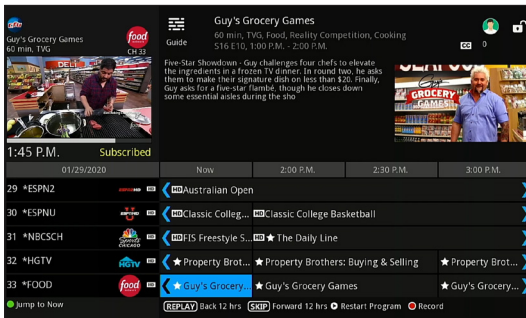


+ NAVIGATE THE GUIDE

- Press the **Up** or **Down Arrows** to view what programs are available on each channel.
- Press the **Left** or **Right Arrows** to view up to 3 days of past and 12 days of future programming.
- Highlight a current program and press **OK** to preview. Press **OK** again to view the program full screen.
- Press **GUIDE** on your remote multiple times to switch the list of available channels to All, Subscribed (channels in your TV package) or any Favorites lists that you create.
- Press **EXIT** to leave the Guide.

DETAILS SCREEN

 The Details screen displays information about a specific program and what actions are available for that program.

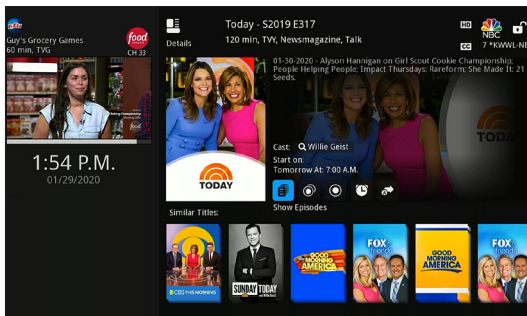


+ ACCESS DETAILS SCREEN

- While in the Guide, use **Arrows** to highlight a program and press **INFO** on your remote.
- While watching a program press **OK** on your remote.

NAVIGATION MENU

 The Menu provides easy navigation to access popular features. Press **MENU** on your remote and use **Arrows** to navigate menu categories.

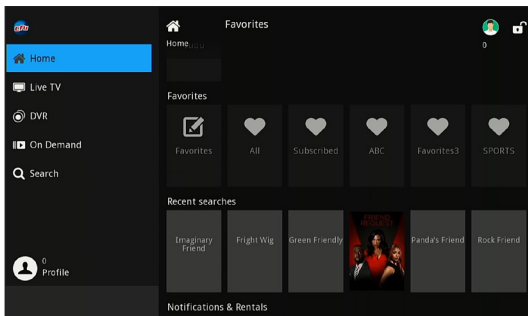

+NAVIGATE THE MENU

- Arrow over using your **Right Arrow** to access a Menu category and navigate features in available category rows.
- Use **BACK** on your remote to move back to the previous screen within the Menu or **EXIT** to leave the Menu.

MENU CATEGORIES

+**HOME MENU** Create lists of your Favorite networks, see results from your recent Searches, and view your scheduled Reminders.

+**LIVE TV MENU** Quickly scan what programs are live on your Favorite networks.


+**DVR MENU** Watch previously recorded programs or series and edit the schedule of items set to record.

+**ON DEMAND MENU** View content available from more than 30 networks for free or rent a new movie just out of the theater.

+**SEARCH MENU** Search all programs available on the Guide, On Demand menu and your DVR for a specific program title.

+**PROFILE** Edit Preferences, Users profiles and Hardware Settings.

+FIND A SHOW OR MOVIE QUICKLY | **SEARCH**

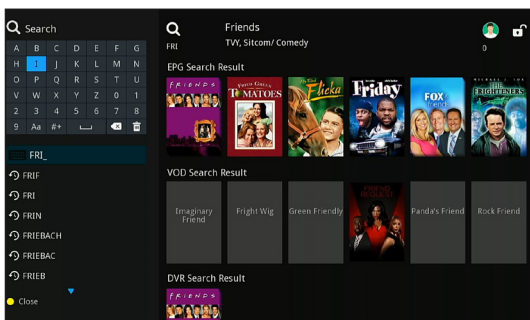 


- Press the Yellow Triangle button marked **A** on your remote to access Search and to display an on-screen keyboard.
- Using **Arrows** and **OK** to select, type the title of the program. Press **BACK** if you need to quickly delete a letter.
- Search results from your electronic program guide (EPG), On Demand (VOD) and DVR will populate in category rows.

+WATCH ON YOUR SCHEDULE | POWERDVR


WATCH WHAT YOU WANT WHEN YOU WANT. Record an unlimited number of networks and store up to 150 hours of HD programming for up to 6 months.

 RECORD A PROGRAM OR SERIES

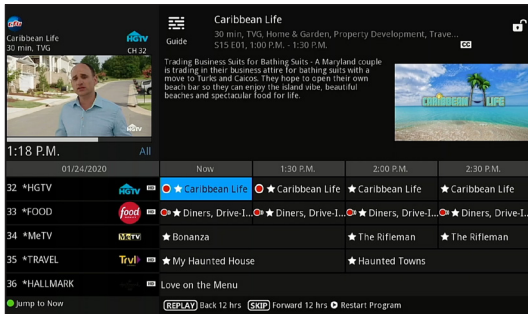

+RECORD THE REST OF A PROGRAM YOU ARE WATCHING Press **REC** on your remote while watching live TV.

 +RECORD A FUTURE PROGRAM While in the Guide, highlight a future program and press **REC** on your remote. The program listing should now have a red recording symbol.

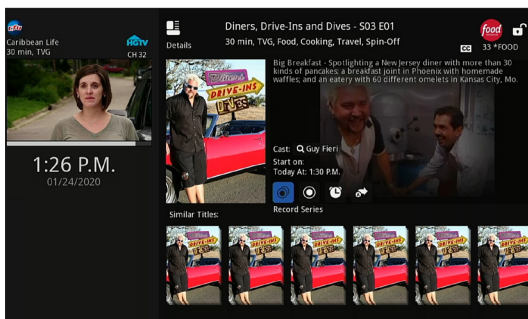

+RECORD A SERIES While in the Guide, highlight a future episode of the series you'd like to record and press **OK** on your remote. You'll be taken to the Details screen. Select Record Series. A dialogue box will display. Edit your preferences and select OK.

 
 
RECORDING TIP

- If you think a program may run past the allotted time, record the program immediately following in addition to your program to ensure you capture the end.

+EDIT SCHEDULED RECORDINGS

- Press **DVR** on your remote and use **Arrows** to navigate to your desired category row.
- To edit a program you set to record, navigate to the To Record category row and select the program. Once on the Detail screen you can cancel the recording or skip a specific episode in a series recording.
- To edit a series recording, navigate to the Series Recording category row and select the series. A dialog box will display and allow you to Edit your recording preferences.

WATCH A RECORDED PROGRAM OR SERIES

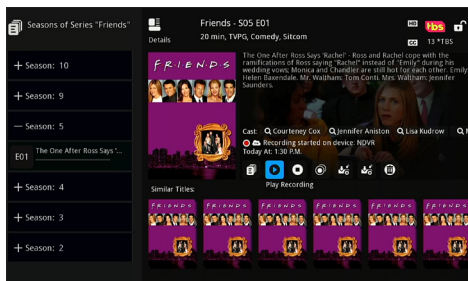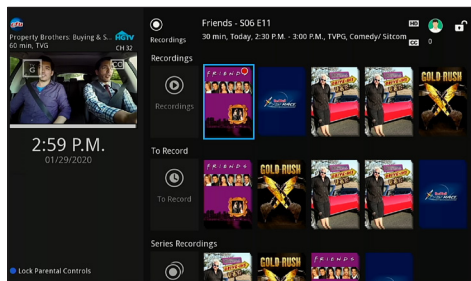

- Press **DVR** on your remote to display the DVR menu.
- In the Recordings category row, use **Arrows** to navigate to the program or series you would like to view and press **OK**. You will be taken to the Details screen. Select Play Recording. Press **STOP** on your remote to exit the recording.

POPULAR RECORDING ACTIONS

The actions available on the Details screen will vary depending if you have recorded a single program or multiple episodes of a series.

+HIDE/SHOW EPISODES Will be available when you have recorded multiple episodes of a series. When Episodes is visible, your series recordings will be sorted by episode number and season (*when applicable*) to allow you to easily navigate to the episode you would like to watch. (*Enter or exit seasons by using your Left and Right Arrow.*)

+PLAY RECORDING View the selected episode from the beginning.

+RESUME PLAY Will be available when you started watching an episode but have not completed it. Select to pick up where you left off.

+DELETE RECORDINGS Your delete recording options will vary depending on the number of episodes you have recorded. You will be able to delete a single episode, a season or a series.

+CONTROL PLAYBACK | FF REW SKIP REPLAY

- Control the playback of a recording or while using On Demand, Catch up or Restart: use **FF** or **REW** to move 4, 16, 32 or 64 seconds, **SKIP** to advance 30 seconds at a time, **REPLAY** to replay the previous 8 seconds. **Stop** will exit.

+WANT MORE INFORMATION | WE'RE HERE TO HELP

HOW-TO VIDEOS | cfu.net/HowToTV

ADD SERVICE | TV Specialists 319.268.5283 | M-F 7:30 a.m. - 4:30 p.m.


TECH SUPPORT | Help Desk 319.268.5221 | M-F 6 a.m. - Midnight, Weekends 8 a.m. - Midnight

+NEVER MISS A PROGRAM | CATCH UP & RESTART

With catch up and restart you can restart a currently-airing program from the beginning and access up to 3 days of past programming so you never miss the beginning of your favorite show or last night's big game again. *Channels with catch up and restart will have an asterisk displayed in the Guide next to the network name.*


+CATCH UP ON PAST PROGRAMMING

 - Navigate to past programming in the Guide by using the **Arrow** keys on your remote. Or press **REPLAY** to jump back 12 hours at a time.
- When you find the program you would like to watch press **OK** to display the Details screen. Select Play From Start to begin the program.

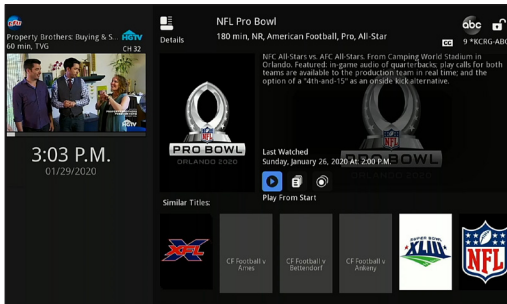


+RESTART LIVE TV

 - Navigate to the current program you want to watch in the Guide by using the **Arrow** keys on your remote.
- Press the **PLAY** button on your remote to restart the program.
- If you are watching a live program you'd like to restart, press **OK** on your remote to be taken to the Details screen. Select Restart TV.

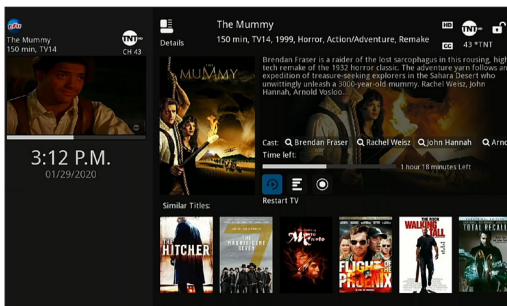

+DISCOVER A NEW SERIES OR MOVIE | ON DEMAND

 Binge a new series or watch a movie anytime you want with On Demand. View thousands of hours of movies or current series episodes from top TV networks. Or rent a new movie just out of the theater.

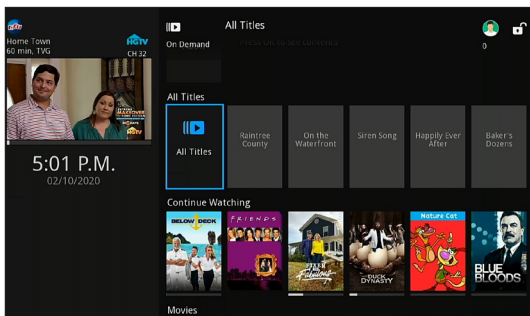

- Press **VOD** to display the On Demand menu.
- Use **Arrows** to scroll through the available On Demand category rows.
- When you find the program you would like to watch press **OK** to display the Details screen. Select Play From Start to begin the program.
- To access On Demand filters, select

the All Titles icon in the All Titles category row. Arrow over to the filters by using the **Left Arrow**. Enter or exit specific filters by using the **Left** and **Right Arrows**. Select filters by pressing **OK**.

+CHOOSE PARENTAL CONTROL SETTINGS

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Users icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. *(Your default PIN is "0")*
- Use your **Down Arrow** and **OK** to select Parental Control.
- Here you will select the content that will be locked once Parental Controls are activated. Use **Arrows** to highlight filter and OK to change filter settings. Use **Left** and **Right Arrows** to change maximum Rating allowed and Unlock Timeout.
- Select Submit to save your settings.

+ACTIVATE PARENTAL CONTROL

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Preferences icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. *(Your default PIN is "0")*
- Use **Arrows** to navigate to Parental Control setting and select.
- Select Submit to save your settings.
- Blocked content will appear as Restricted in the Guide. View blocked content by entering your PIN.

+DEACTIVATE PARENTAL CONTROL

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Preferences icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. *(Your default PIN is "0")*
- Use Arrows to navigate to Parental Control setting and select to remove the check mark.
- Select Submit to save your settings and allow all content.

+LOCK RENTALS

- Press **MENU** on your remote and use **Arrows** to navigate to Profile.
- Arrow over using your **Right Arrow** and select the Users icon.
- Using the **Numbers** keypad on your remote enter your PIN and select OK. *(Your default PIN is "0")*
- Use **Arrows** and **OK** to select Edit.
- Use **Arrows** to navigate to PIN. Using the **Numbers** keypad on your remote enter your PIN.
- Use **Arrows** and **OK** to select Enable PIN for Purchase.
- Select Submit to save your settings. You will need to enter your PIN to purchase rentals.

REMOTE CONTROL

POWER/STANDBY

Power selected device on/off

TV INPUT

Change TV input device

DEVICE CONTROL

Selects device to control

OPTIONS

Provides options for TV or other input devices

BACK

Back one level in menus

EXIT

Exit menu

VOL

Increase/decrease volume

MUTE

Turns volume on/off

NUMBER KEYS

Allows you to navigate to a specific channel number

DOT KEY

For future use

DVR

Displays DVR menu

LIVE TV

Takes you Live TV

MEDIA

For future use

SETUP

Set up remote for TV

TRANSPORT KEYS

Controls video
REPLAY - back 8 seconds
SKIP - ahead 30 seconds

REC

Starts/stops recording

MENU

Display navigation menu

INFO

Display information about program

NAVIGATION

Arrow keys navigate menus, OK executes selected

VOD

Displays On Demand menu

GUIDE

Displays program guide

SHORTCUTS

Actions vary, see on-screen prompts for directions

CH/PG

Change channel, or page up/down within guide

LAST

Change to previous channel



Cedar Falls Utilities
THE POWER OF SERVICE

1 Utility Parkway • PO Box 769 • Cedar Falls, IA 50613